


# FISKARS® PRO

## Blade change instructions Fixed Blade Utility Knife (1027222)

CAUTION: For your protection wear gloves, as well as ANSI-approved safety glasses during this operation.

EN

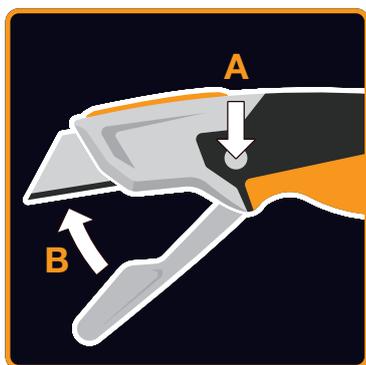


1. If the blade is exposed, press the button on the side of the knife (A) to engage the blade guard (B).



2. Turn the circular lock counter-clockwise until the handle springs open.



3. Unfold knife handle completely.

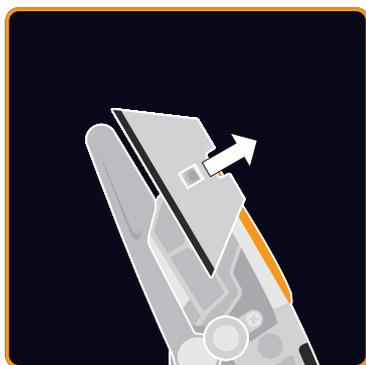

4. Remove and replace blade.



5. Close handle and turn the circular lock clockwise until it's tightened.