FISKARS® PRO



Blade change instructions Drywaller's Utility Knife (1027226)

CAUTION: For your protection wear gloves, as well as ANSI-approved safety glasses during this operation.



1. Make sure blade is extended.



2. Slide the lock until the handle springs open.



3. Open knife handle completely.



4. Remove and replace blade.



5. Close knife handle until it clicks.