

## Changing the mesh bag on a Fiskars Fruit Picker

To remove bag:



1. Pull the stripe of the mesh bag up over the tabs.



2. Continue pulling all the way up until the head is entirely inside the mesh bag.



3. Pull mesh bag completely off the head.

To reinstall bag:



1. Place the head inside the mesh bag, as in step 2 above.



2. Make sure one point of the stripe is hooked into the flange, then pull bag down.



3. Continue pulling the bag all the way down until the stripe fits securely around the flange.



4. The installation is now complete. Enjoy!