

## How to use Fiskars® Extendable Fruit Picker



1. Adjust orange knob to set desired head angle.



2. Ensure mesh bag is hanging down, away from the pull tabs.

To adjust pole to desired length:



1. Flip the orange clip open.



2. Push down on the orange button on the side of the pole while pulling the base of the head to extend the pole to the proper length.



3. Extend until you've reached your desired pre-set hole.



4. Once you hear a "click," flip the orange clip closed.



5. Your fruit picker is now ready to use. Enjoy!

## Changing the mesh bag on a Fiskars Fruit Picker

To remove bag:



1. Pull the stripe of the mesh bag up over the tabs.



2. Continue pulling all the way up until the head is entirely inside the mesh bag.



3. Pull mesh bag completely off the head.

To reinstall bag:



1. Place the head inside the mesh bag, as in step 2 above.



2. Make sure one point of the stripe is hooked into the flange, then pull bag down.



3. Continue pulling the bag all the way down until the stripe fits securely around the flange.



4. The installation is now complete. Enjoy!